Basic Functions More Advanced Things to **Mastering Contents Appendices** & Features the Basics **Techniques** Remember

Click a tab to jump to that chapter.























Software User Guide

for Windows

- ZoomBrowser EX
- PhotoStitch
- **How to Use This Manual**









About this Manual

Notation Conventions

The contents of this manual are classified according to the following symbols.

IMPORTANT

• The "Important" sections contain operating precautions or important topics. Ensure that you read them.

A HINT

 The "Hint" sections contain procedural suggestions and tips for your convenience. Read them as necessary.

Operating Environment

- This manual uses Windows XP screen shots and procedures in the explanations. The screen shots and procedures may appear slightly different if you are using another version of Windows.
- The displayed screens and procedures may also differ slightly from the examples depending upon the camera or printer model in use.
- The explanations in this guide are based on the premise that a Canon compact camera will be used with the software.

Word Searches

This document is provided as an Adobe Reader document. Use Adobe Reader's Search functions to find specific words or phrases that you recall but cannot find. To access this function, in Adobe Reader click the [Edit] menu and select the [Search] option.

If you are using Adobe Reader 8 or later, you can also perform searches with the [Find] function right on the toolbar.









This page and the next present the basic functions of ZoomBrowser EX as well as some of its special features.

To Transfer



To View


Magnifying the Display (p. 21)

Transferring

(p. 10)



Comparing Images (p. 40)



- Displaying
 Shooting
 Information
 (p. 21)
 - Slide Shows (p. 34)



Transfer images with a single click.




To Organize

Backing Up to a CD (p. 32)



Changing
File Names in
Batches
(p. 35)



Using Star Ratings (p. 36)



Deleting (p. 19)



Using Comments (p. 36)



Performing
Searches
(p. 38)



Next >









To Edit

Adjusting
Color and
Brightness
(p. 23)



Inserting
Text
(p. 24)



Converting RAW Images (p. 28)



Formatting Images as Wallpaper (p. 31)




Resizing Images (p. 29)



Red-Eye Correction (p. 22)



Trimming (p. 24)



Merging Images into Panoramas (p. 27)



Saving Still Images from Movies (p. 30)



Editing Movies (p. 27)



To Connect to a Camera

Transferring to a Camera (p. 43)



Configuring My Camera Settings (p. 41)



You can change the camera's start-up image and shutter sound.

To Send Email

Attaching Images to Email (p. 33)



You can reduce image file sizes.

Previous







Table of Contents

About this Manual	2
Basic Functions & Features	3
Things to Remember	7
The Two ZoomBrowser EX Windows	
Transfer Window/Organizing Window	7
Main Window	
How to Display the Main Window	
Names of the Main Window Parts	
How to Perform Tasks	
Selecting Tasks and Task Window Procedures	
Mastering the Basics	
Transferring Images	10
Transferring Images by Connecting the Camera to a Computer	
Printing	
Printing a Single Image on a Single Page	
Index Print	
How to Use CameraWindow	
First Window to OpenScreen Showing the Image Index List and Image View	
How to Use the Main Window	
Main Window	
Browser Area Tasks	
Viewer Window	
More Advanced Techniques	
Editing Images	22
Red Eye Correction	22
Auto Adjustment	
Color/Brightness Adjustment	
Adjusting Sharpness–Emphasizing Outlines	
Trimming–Cropping a Portion of an Image	
Inserting Text	
Using Other Editing Software Attaching Sounds	
Creating Panoramic Images–PhotoStitch	
Editing Movies	
Converting RAW Images–Digital Photo Professional	







Exporting	29
Changing Image (Stills) Sizes and Types	29
Changing Movie Sizes and Types	
Extracting Stills from Movies	30
Exporting Shooting Information	30
Creating Computer Screen Saver Images	31
Creating Computer Wallpaper Images	31
Saving to CDs	32
Email	33
Attaching Images to Email	33
Slide Shows	34
Viewing Images in Slide Shows	34
Image Management	35
Changing File Names in Batches	35
Sorting Images into Folders by Shooting Date	35
Configuring Image Information Settings	36
Setting Star Ratings	36
Inserting Comments	36
Assigning Keywords	37
Searching, Filtering and Sorting Images	38
Searching Images	38
Filtering Images	
Sorting Images	
Comparing Images	
Comparing Multiple Images	
My Camera Settings	
Changing the Shutter Sound and Start-Up Image	
Transferring Images	
Transferring Images to a Camera	
Preference Settings	44
Customizing ZoomBrowser EX	
Customizing the Task Buttons	44
Appendices	. 45
Supported Image Types	







The Two ZoomBrowser EX Windows

Transfer Window/Organizing Window

The following two windows are the main ones used for ZoomBrowser EX procedures.




Transfer window, which opens when a camera is connected. CameraWindow


View of camera images



You can transfer all or a selection of images from the connected camera.

CameraWindow closes and the screen changes after the images are transferred from the camera.



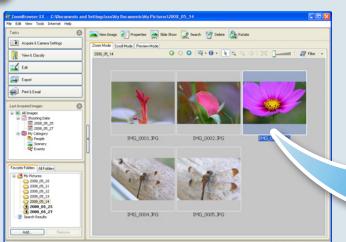


You can view, edit and print the images in the computer.



Double-click this icon on the desktop.

Double-click an image.

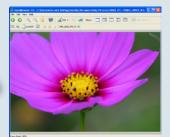

The Viewer Window that appears when you view an image.







Basic Functions & Contents & Things to Mastering More Advanced Appendices & Features & Techniques


Main Window

How to Display the Main Window

The Main Window will display after camera images are transferred and CameraWindow closes. You can also display it by double-clicking the ZoomBrowser EX icon on the desktop.



Names of the Main Window Parts

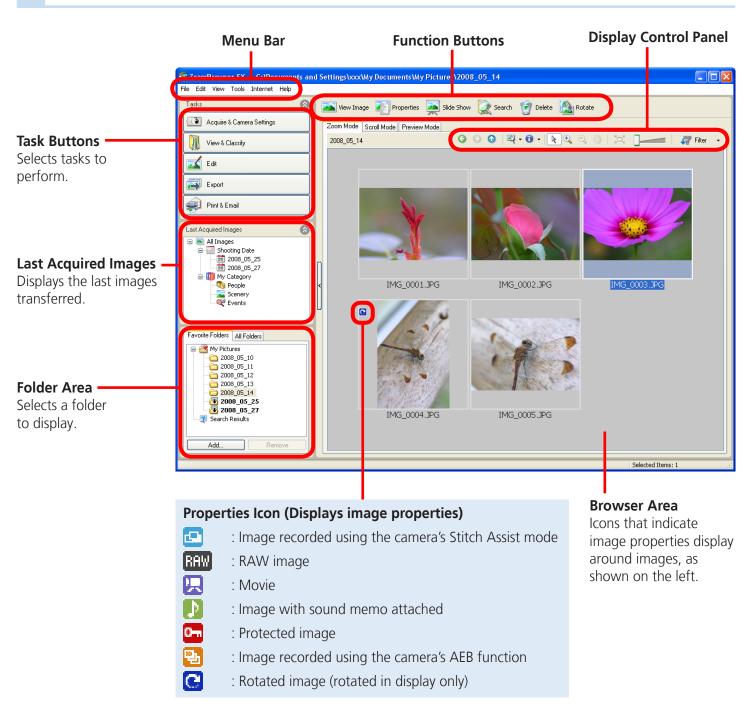








Basic Functions & Contents & Things to Mastering More Advanced Appendices & Features & Techniques

How to Perform Tasks

Selecting Tasks and Task Window Procedures

Many ZoomBrowser EX functions can be accessed by selecting a task in the Main Window and following the instructions in the guidance section of the new window.

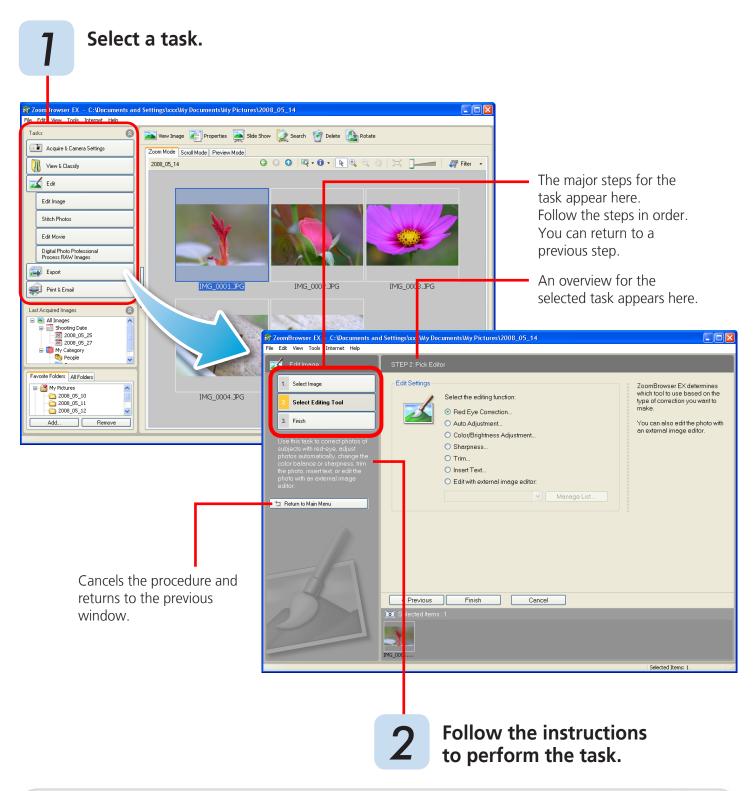







Transferring Images

Transferring Images by Connecting the Camera to a Computer


Transfer the camera images to the computer.




IMPORTANT

- The instructions in this software manual assume that you have correctly installed the software and driver software. See the guides supplied with your product package for software installation procedures.
- With some versions of Microsoft Windows, CameraWindow may not open when the camera is connected. In this case, double-click the ZoomBrowser EX icon on the desktop to start ZoomBrowser EX and open the Main Window. Click the [Acquire & Camera Settings] task button, followed by [Connect to Camera].
- Connect the camera to the computer with the supplied interface cable.
- Turn on the camera power, set it to playback mode and prepare it to communicate with the computer.
- When a window similar to the one at the right appears, select [Canon CameraWindow] and click [OK].

With Windows Vista, click [Downloads Images From Canon Camera using Canon CameraWindow] in the AutoPlay window.

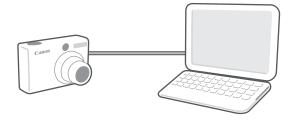

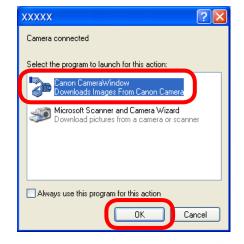










Click [Transfer Untransferred Images].

Only images that have not yet been transferred will start to transfer.


CameraWindow

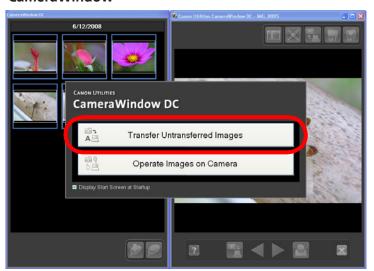

When you click [OK] in the dialog that indicates the transfer is complete, the transferred images will display in the Main Window.

You can select the newly transferred images by their shooting dates or My Category (select models only) classification. (These are virtual folders.)

Folders containing newly acquired images

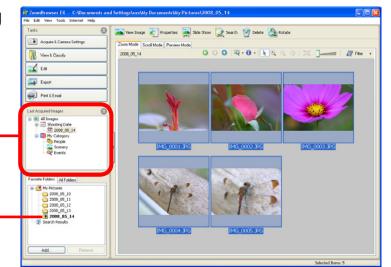


- Images from memory cards with large numbers of images (more than 1,000) may not transfer correctly. If this happens, please use a memory card reader to transfer.
- Movie files take time to transfer since the files are large.

A HINT -

Changing the Transfer Destination Folder

The default settings save transferred images into the [Pictures] or [My Pictures] folders. To change the destination folder, select [Operate Images on Camera] in Step 4 as described above, then click the button shown on the right, and select a folder.

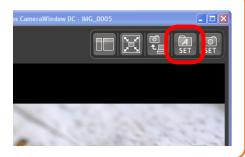











Selecting Images to Transfer

To transfer only a selection of images from the camera, select [Operate Images on Camera] in CameraWindow that first appears and then perform the following procedures.

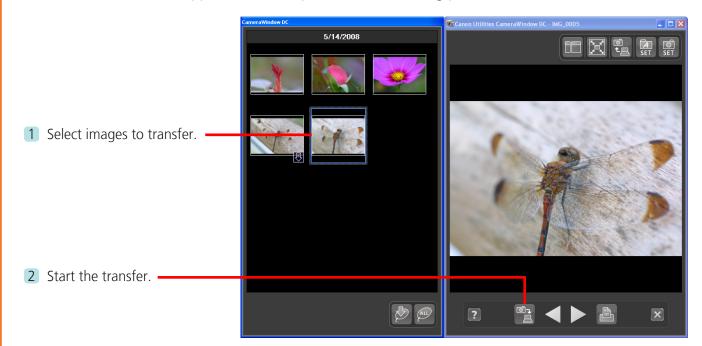

Transferring from a Memory Card Reader

An action selection window will open when you insert a memory card into the memory card reader. If you select [View/Download Images Using Canon ZoomBrowser EX], ZoomBrowser EX will start and display the following window. Use this window to perform the transferring procedures.

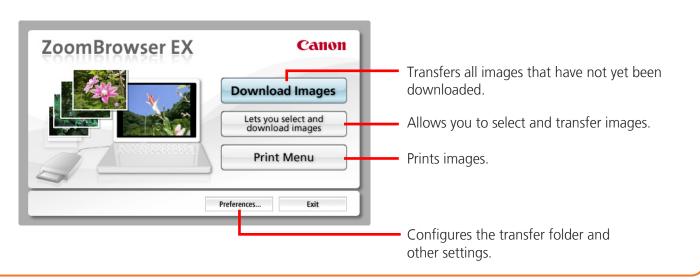









Printing

Printing a Single Image on a Single Page

Prints one image per page.

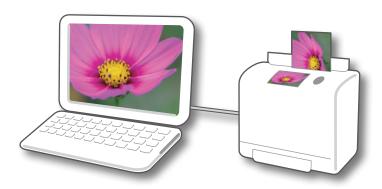


Click the [Print & Email] task button in the Main Window.

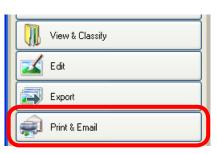

Click [Photo Print].



Confirm that [1. Select Images] is chosen and select images for printing.

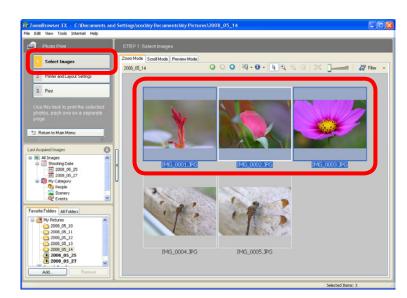










Click [2. Printer and Layout Settings] and set the categories as desired.

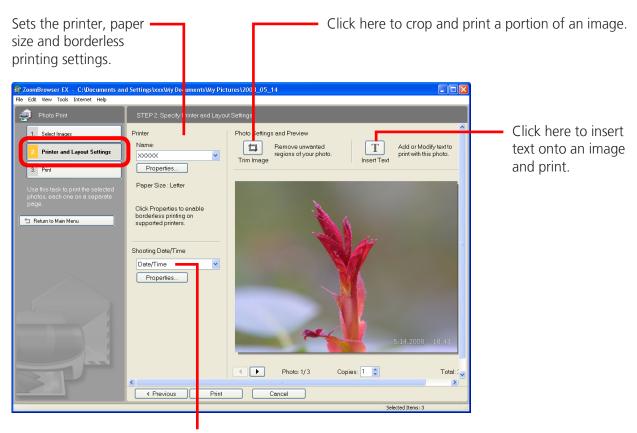

Sets the shooting date/time imprint settings.

Click [3. Print].
Printing will start.



Printing Using Other Software

If you have specialized printing software installed on the computer, you can also use it to print the images. Click the [Print & Email] task button in the Main Window, followed by [Print Using Other Software].








Index Print

Prints an index of the images.




Click the [Print & Email] task button in the Main Window.

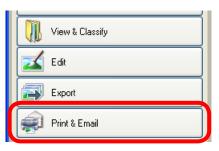

Click [Index Print].



Confirm that [1. Select Images] is chosen and select images for printing.

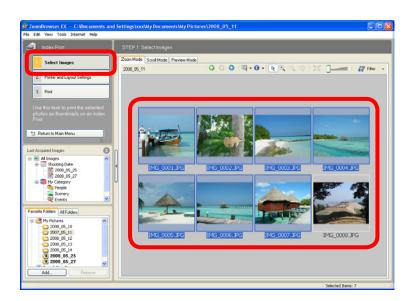










Click [2. Printer and Layout Settings] and set the categories as desired.

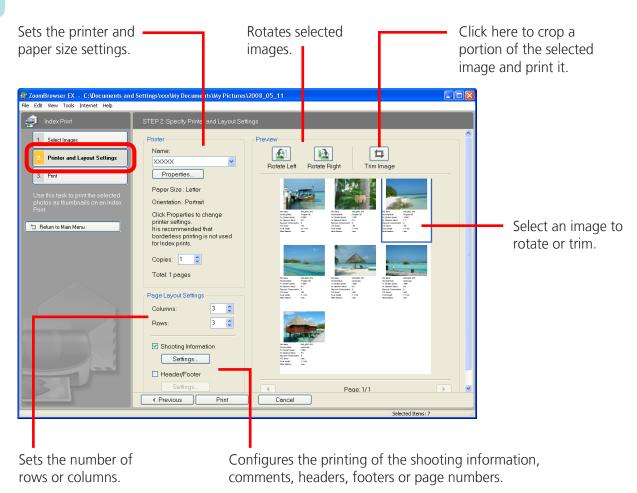

Click [3. Print].
Printing will start.








How to Use CameraWindow

First Window to Open

This is the first screen to appear in CameraWindow.

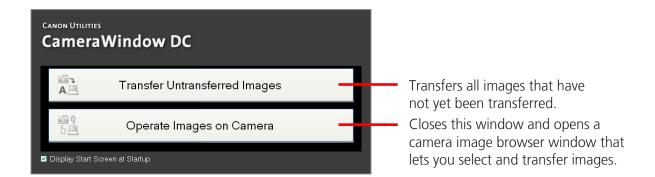








Basic Functions & Contents Things to Mastering More Advanced Appendices Techniques

Screen Showing the Image Index List and Image View

The Thumbnail Window on the left of the screen displays the images on the memory card in the camera as "thumbnails" or small versions of the images in an index list. When you select an image from the Thumbnail Window, the image displays in the View Window on the right.

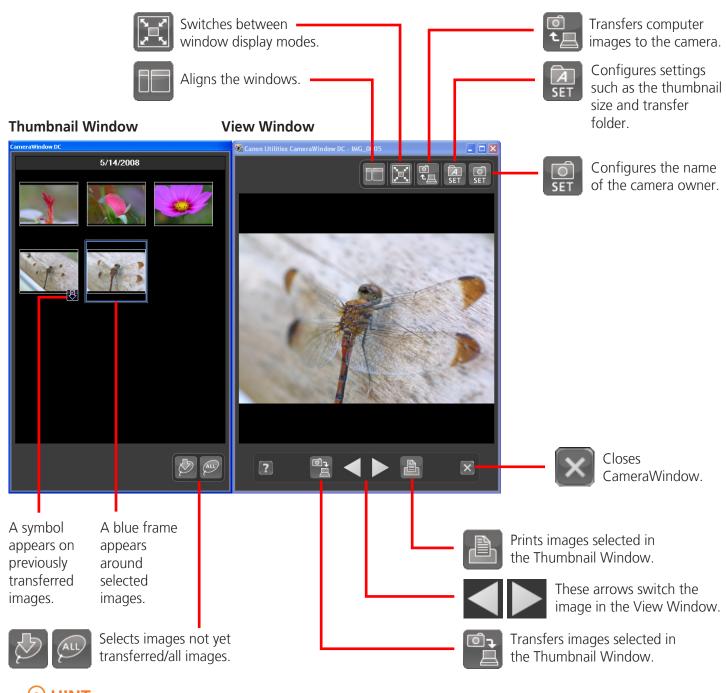



Use the Help Function

The Help button or Help menu is available in most ZoomBrowser EX windows. It is there for when you are unsure how to proceed.








How to Use the Main Window

Main Window

This is the main window for performing tasks in ZoomBrowser EX.

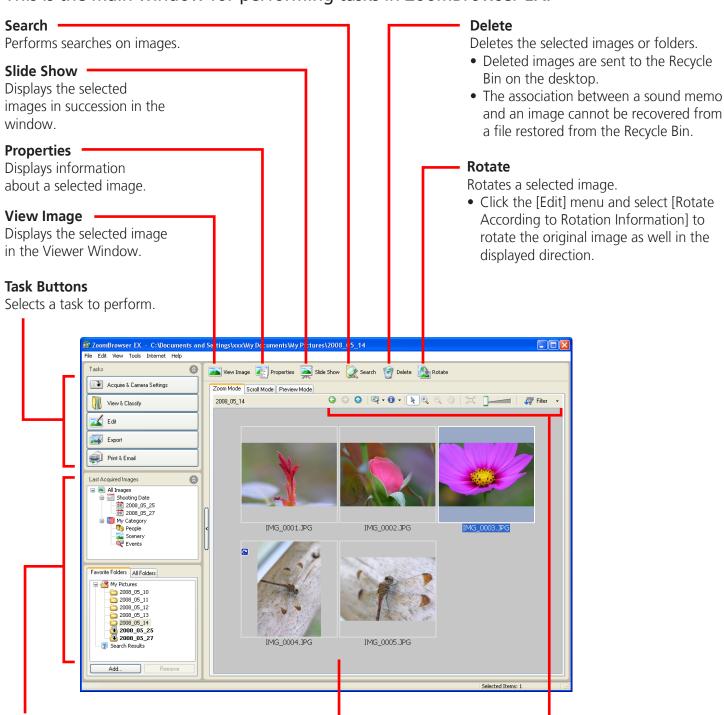

Last Acquired Image/Folder Area

Selects a folder to display.

 You can register folders you use often as Favorite Folders (Register by clicking [Add].

Browser Area

Displays the images in an index list.

Display Control Panel

Configures the settings for displaying images in the Browser Area.








Browser Area Tasks

Display Mode

Selects a display mode for the Browser Area.

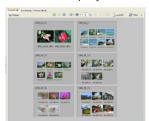

Zoom Mode: suited for surveying many images.



Scroll Mode: allows thumbnails to be viewed at a size suited for easy viewing.



Preview Mode: allows the image information to be read while viewing the image.


Change the Folder Level

The level of folder displayed can be changed with the following procedures.

- In Zoom mode, position the mouse cursor over the folder and click the [icon when it displays.
- In Scroll or Preview mode, double-click the 📁 icon.
- To advance to a higher folder level, click the 🚹 icon.

Change the Display Size

You can change the display ratio (Zoom mode) or thumbnail size (Scroll mode) with the slider.

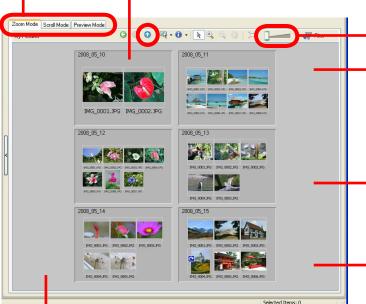

Select Images

Clicking an image in the Browser Area selects that image. To select multiple images, hold down the [Ctrl] key while clicking images, or hold down the [Shift] key and click a starting and ending image to select a range of adjacent images.

Display Images

Double-clicking an image in the Browser Area (or selecting the image and clicking (Display Image)), displays it in the Viewer Window.

Move, Copy Images

To move an image between folders, drag it over the destination folder and release the mouse button. To copy an image, hold the [Ctrl] key while releasing the mouse button as above.

You can also use the same procedures to copy images between Windows Explorer and the Main Window.

Create New Folder

To create a new folder in the Browser Area, click the [File] menu and select [New Folder].

A HINT -

Right-Click Context Menus

Right-clicking over a window or image displays contextual menus. These menus contain the functions available in the current context as well as other convenient functions. Use the right-click menus to increase your efficiency.









Viewer Window

Double-clicking an image in the Main Window displays it in this window.

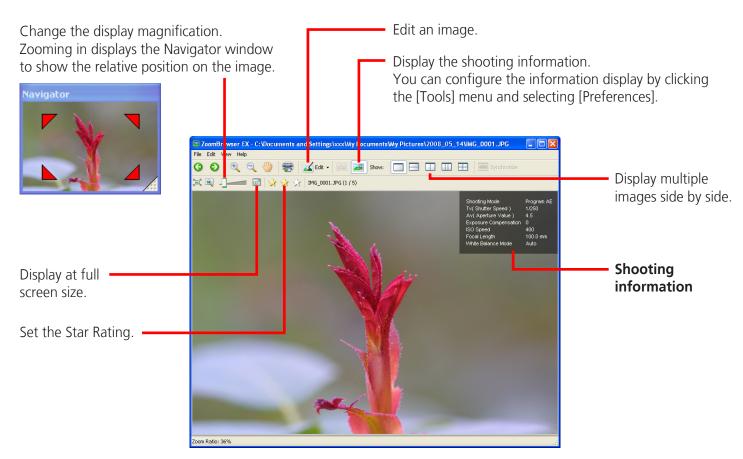

• The following window will appear when a movie is displayed.

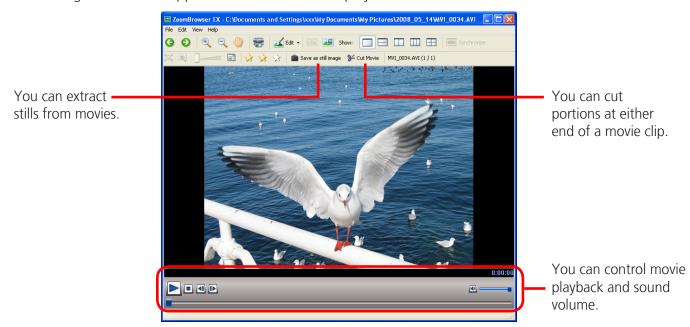

• The [Display Original Image] button will display beneath RAW images in the Viewer Window. Click this button to display the converted image in the Viewer Window.








Editing Images

IMPORTANT

- The original image will be overwritten after an image is edited unless the file name is changed before saving it. To preserve the original image intact, change the file name when saving the edited image.
- This section introduces the procedures started by clicking the Edit task button. Images can also be edited in a similar way by clicking the [Edit] button in the Viewer Window.

Red Eye Correction

Restores eye appearance to the original color when light reflected from the flash makes them appear red.

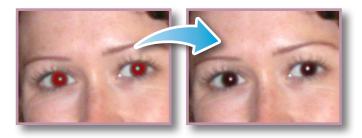

- Click [Start] when Auto mode is selected.
- Switch to Manual mode if Auto mode cannot correct the image, and select the location of the eye to correct.



Procedures

- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- 4 [Red Eye Correction]
- **5** [3. Finish]
- Movies and RAW images cannot be edited.

Auto Adjustment

Automatically adjusts the image color balance and brightness.





- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- **2** Select an image.
- 3 [2. Select Editing Tool]
- 4 [Auto Adjustment]
- **5** [3. Finish]
- Movies and RAW images cannot be edited.








Color/Brightness Adjustment

You can adjust image color balance and brightness using a variety of methods.

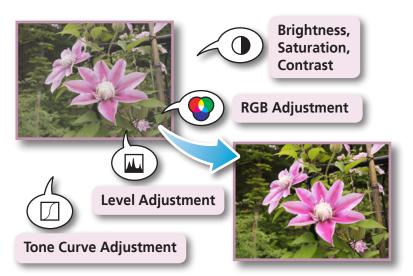




- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- 4 [Color/Brightness Adjustment]
- 5 [3. Finish]
- Movies and RAW images cannot be edited.

Adjusting Sharpness-Emphasizing Outlines

Makes images appear sharper by emphasizing the outlines of subjects, such as people and objects.

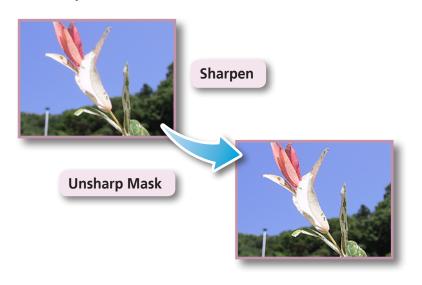

- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- 4 [Sharpness]
- **5** [3. Finish]
- The Unsharp Mask [Radius] is the size at which the outline is detected and the [Threshold] is the standard value at which the outline is determined.
- Movies and RAW images cannot be edited.








Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

Trimming-Cropping a Portion of an Image

Use this to delete unnecessary portions of the image and leave only the necessary portions.

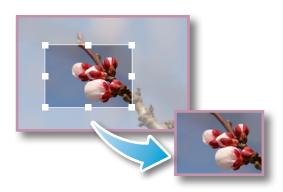



Procedures

- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- **4** [Trim]
- [3. Finish]
- You can also input values or an aspect ratio to specify the trim area.
- Movies and RAW images cannot be edited.

Inserting Text

Use this to insert text onto the image.





- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- 4 [Insert Text]
- **5** [3. Finish]
- Placing a checkmark in the [Antialias] box causes the text edges to blend in with the underlying image.
- Movies and RAW images cannot be edited.









Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

Using Other Editing Software

If you register another image editing program with ZoomBrowser EX in advance, you can use that software to edit an image selected in ZoomBrowser EX.

Registering an Editing Program






Procedures

- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- 4 [Edit with external image] editorl
- 5 [Manage List]

Editing Images with a Registered Editing Program

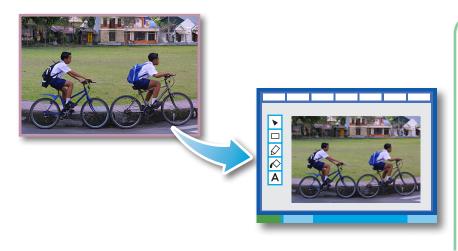



- Select a task from the left side of the window (p. 9): [Edit] and [Edit Image].
- 2 Select an image.
- 3 [2. Select Editing Tool]
- 4 [Edit Image Using Other] **Editor**
- **5** [3. Finish]
- The shooting information may be lost from images recorded with the camera and then processed and saved with another image editing program.
- Movies and RAW images cannot be edited.










Basic Functions Things to Mastering **More Advanced Appendices** Contents Remember & Features the Basics **Techniques**

Attaching Sounds

You can add sound effects or background music to images and play back the sounds.

Adding Sound

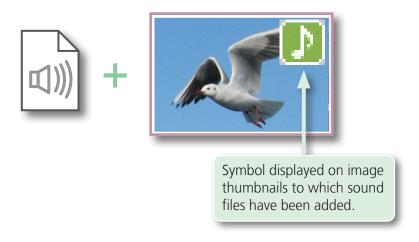



- WAVE type sound files (extension ".wav") can be attached to images.
- Attaching a sound file to an image results in the selected sound file being copied into the same folder as the image file.

Playing an Image Sound File












Creating Panoramic Images-PhotoStitch

You can create wide panoramic images by moving the camera slightly when recording a series of images and merging them into one image.

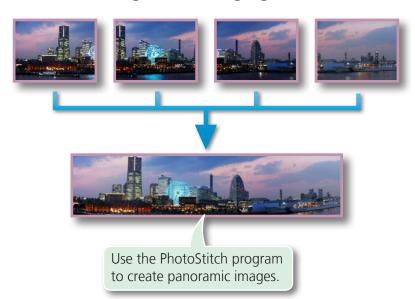



Procedures

- Select a task from the left side of the window (p. 9): [Edit] and [Stitch Photos].
- Movies and RAW images cannot be edited.

A HINT -


Using the Stitch Assist Mode

If you use the camera's Stitch Assist mode to record the images, PhotoStitch can automatically detect the image order and merge direction, making it easier to merge the images. (Some camera models may not feature the Stitch Assist mode.)

Editing Movies

You can create original movies by linking movie clips and still images.

You can even add titles and other text, background music and various special effects to the movie.

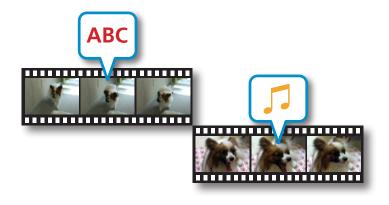



Procedures

Select a task from the left side of the window (p. 9): [Edit] and [Edit Movie].







Converting RAW Images-Digital Photo Professional

You can convert RAW images to JPEG and TIFF images.

Image type retaining the detailed image data from the initial capture. Image type suited for pasting into general programs, such as word processors and spreadsheet applications, and for sending by email.



Exposure correction L

Color adjustment



Lossless image adjustments

possible

White balance adjustment

Color space configuration




Procedures

- Select a task from the left side of the window (p. 9): [Edit] and [Digital Photo Professional Process RAW Images].
- Only RAW images compatible with Digital Photo Professional can be processed.
- Ensure that you use the RAW image conversion software included with your camera.
- You can use the Edit image window to adjust the image brightness and color to your satisfaction.

A HINT

About RAW Images

RAW images contain the data captured by the camera's image sensor without modification. Since they contain raw data that differs from the usual JPEG images by not having any image adjustment or compression processing performed in the camera, they can be converted on a computer with a lossless process.

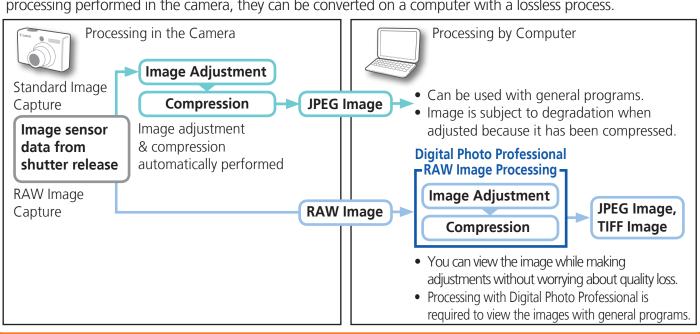

IMPORTANT

- RAW images can only be captured on certain camera models that list "RAW" as one of the data types included in the "Specifications" section of the *Camera User Guide*.
- Only RAW images compatible with Digital Photo Professional can be processed. Check the Data Type item of the Specifications section of the *Camera User Guide* for compatibility.








Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

Exporting

Changing Image (Stills) Sizes and Types

You can change an image's size and format when exporting it so that it can be published on the Internet or attached to an email message.

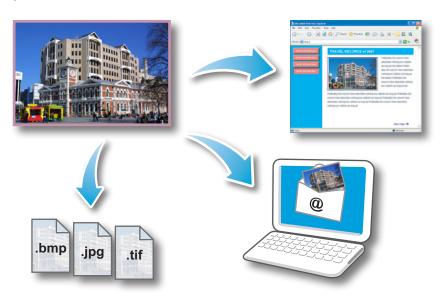




Procedures

- Select a task from the left side of the window (p. 9): [Export] and [Export Still Images].
- You will lose the shooting information if you save images as a type other than JPEG.

Changing Movie Sizes and Types

You can change a movie's size and format when exporting it so that it can be published on the Internet or attached to an email message.

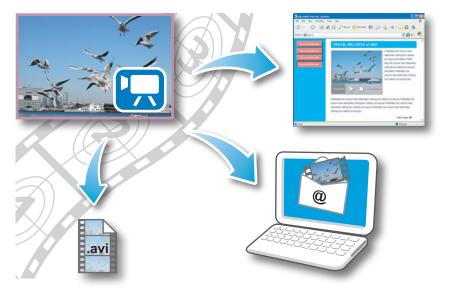



- Select a task from the left side of the window (p. 9): [Export] and [Export Movies].
- You can also use this function to rotate movies.








Extracting Stills from Movies

You can extract and save stills from your favorite frames recorded in a movie.

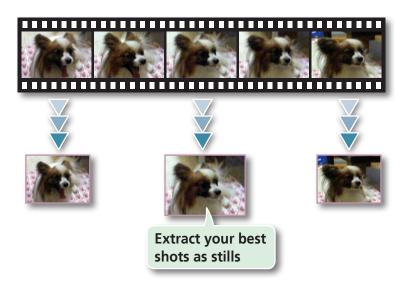




Select a task from the left side of the window (p. 9): [Export] and [Extract frames from a movie].

Exporting Shooting Information

You can export the shooting information recorded with an image, such as the shutter speed and exposure, as a text file.

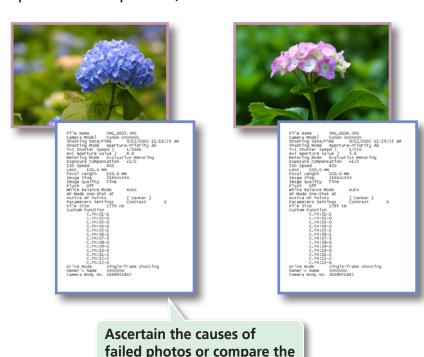

settings for several images.



Select a task from the left side of the window (p. 9): [Export] and [Export Shooting Properties].







Basic Functions Things to Mastering **More Advanced Appendices** Contents Remember & Features the Basics **Techniques**

Creating Computer Screen Saver Images

You can export images to serve as computer screen savers.





Procedures

Select a task from the left side of the window (p. 9): [Export] and [Export as a Screen Saver].

Creating Computer Wallpaper Images

You can export images to serve as computer wallpaper images.





Procedures

Select a task from the left side of the window (p. 9): [Export] and [Export as a Wallpaper].








Saving to CDs

You can save images along with their shooting information to CD-R/RW discs.

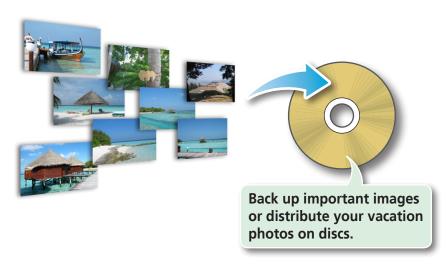



Select a task from the left side of the window (p. 9): [Export] and [Backup to CD].

IMPORTANT

- This function can only be used with computers that satisfy the following requirements:
 - Equipped with a CD-R/RW drive as standard equipment
 - Writing to the CD-R/RW drive operates correctly with Windows.
- If a window similar to that shown to the right appears when a new CD-R/RW disc is placed in the drive, click [Cancel] to close the window.









Basic Functions Things to **Mastering More Advanced Appendices** Contents Remember & Features the Basics **Techniques**

Email

Attaching Images to Email

You can send images as email file attachments.





- Select a task from the left side of the window (p. 9): [Print & Email] and [Email Images].
- You can configure how the email program automatically starts up by starting the Internet Explorer program, and clicking the [Tools] menu, followed by [Internet Options], [Programs] tab, and the [E-mail] pull-down menu (for Windows XP). When using Windows Vista, configure the settings in your e-mail software.








Slide Shows

Viewing Images in Slide Shows

A multiple selection of images can be shown at full size on the screen in succession as a slide show.

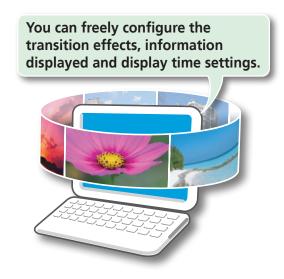



Select a task from the left side of the window (p. 9): [View & Classify] and [View as a Slide Show].


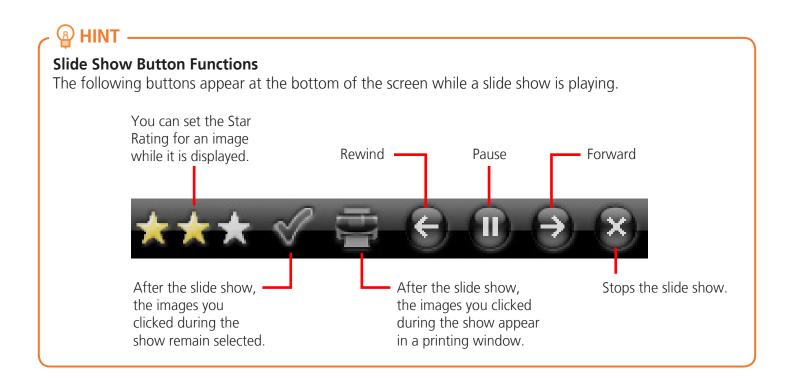




Image Management

Changing File Names in Batches

You can change the file names of multiple images in one procedure.

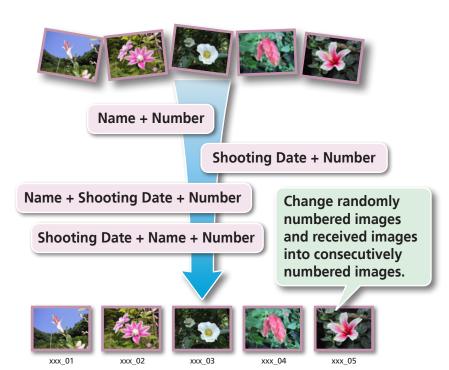




Procedures

- Select a task from the left side of the window (p. 9): [View & Classify] and [Rename Multiple Files].
- You can change individual file and folder names by clicking the [File] menu and selecting [Rename] or by clicking on the file name in Preview mode.
- Changing the image name in ZoomBrowser EX also changes the actual file name on the disk.

Sorting Images into Folders by Shooting Date

You can sort images into folders by their shooting dates.

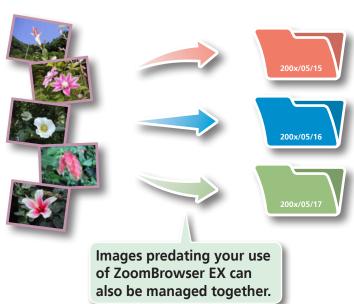



Procedures

Select a task from the left side of the window (p. 9): [View & Classify] and [Classify into Folder].








Configuring Image Information Settings

Setting Star Ratings

You can set the Star Ratings used in searching and displaying images in the index list.




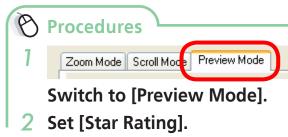


 You can also set the Star Ratings by accessing the [Edit] menu, the Properties Window or the Viewer Window.

Inserting Comments

You can freely insert your choice of text as Comments.

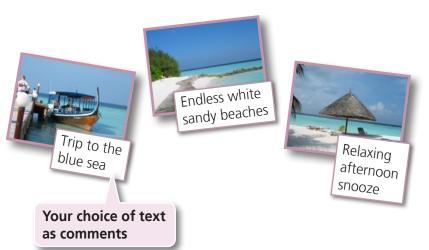

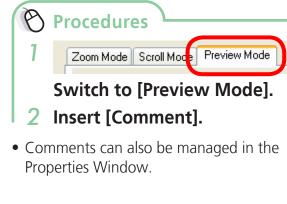







Assigning Keywords

You can set Keywords for use in image searches.





Switch to [Preview Mode].

- 2 Insert [Keywords].
- Keywords can also be managed from the [Tools] menu or Properties Window.
- To add keywords, click the [Tools] menu and select [Manage Keywords].

A HINT

About Image Information

This chart shows the information other than shooting information that can be added to images.

Information Type	My Category	Star Ratings	Comments	Keywords
Content	Categories such as People, Scenery, etc.	Rated on basis of 3 rankings: 全人	Text input without restriction regarding the shooting circumstances or associated memories.	Selections are made from a list (editable) of keywords, such as the photographic subject, place or action.
Configuration Method	Configured in Camera	Configured in ZoomBrowser EX		
Used in Searches	_	0	0	0
Used as Filter Criteria	0	0	_	_
Display beneath Thumbnail	0	0	0	_

Categories displayed beneath thumbnails can be selected by clicking 🕠 🔻 in the Display Control Panel.







Searching, Filtering and Sorting Images

Searching Images

You can search images using parameters extracted from the information associated with them.





- Select a task from the left side of the window (p. 9): [View & Classify] and [Search].
- After a search, the correlated images display in the [Search Results] folder.





Tasks Related to Search Results

You can select images in the [Search Results] folder and perform operations on them, such as printing or copying them to other folders.

IMPORTANT

 Please note that deleting an image from the [Search Results] folder deletes the original image. Use caution in deleting items from this folder.








Basic Functions Things to **Mastering More Advanced Appendices** Contents & Features Remember the Basics **Techniques**

Filtering Images


You can use filters to display only images meeting the selected parameters in the Browser Area.



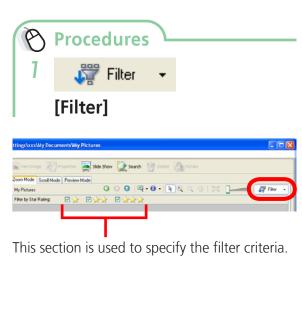

Sorting Images

You can sort images in the Browser Area based on the specified parameters.

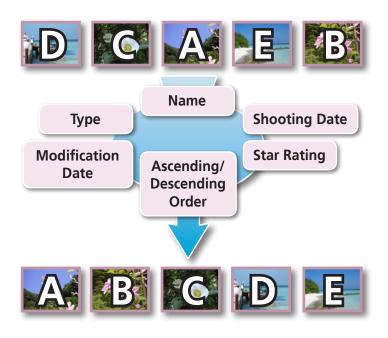












Comparing Images

Comparing Multiple Images

When a good photo opportunity arises, you can shoot the same subject using different shutter speeds and exposures. In ZoomBrowser EX, it is easy to compare images so that minute differences can be detected.

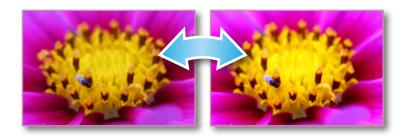

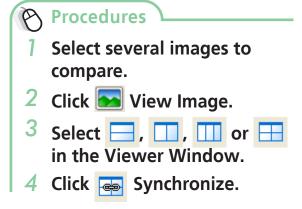

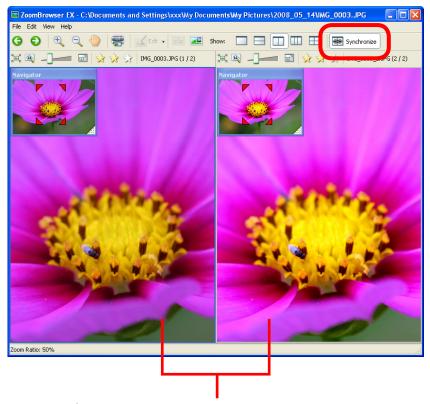

 Selecting [Synchronize] causes actions such as increasing/reducing the magnification level or scrolling around the image to apply to all of the selected images in lock step, making it easy to check minute details of focus, coloring and other image characteristics.

Actions performed on an image, such as scrolling or changing the magnification, are performed on the other image as well.








Basic Functions Things to Mastering More Advanced **Appendices** Contents Remember & Features the Basics **Techniques**

My Camera Settings

Changing the Shutter Sound and Start-Up Image

You can select from dedicated screens to register to the start-up screen that appears when turning the camera on, and dedicated sounds to register to various camera operation sounds (My Camera Settings).

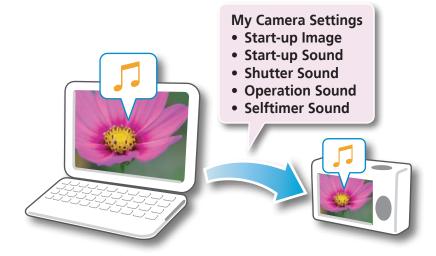



Procedures

- Connect the camera to the computer.
- 2 Turn on the camera power, and set it to playback mode.
- 3 If the [Select program to launch for this action] (or AutoPlay) dialog opens, click [Cancel] (or was in Windows Vista). If CameraWindow opens, click [Operate Images on Camera], followed by .
- 4 Click start [Start], followed by: [All Programs] or [Programs], [Canon Utilities], [CameraWindow], [MyCamera], [MyCamera].
- 5 Click [Connect to Camera].

IMPORTANT

- My Camera functions are only available in cameras that list both "Sound Options" and "Start-up Image" in the "Set up Menu" list in the Camera User Guide.
- Do not interrupt the connection between the camera and computer when My Camera Settings are being transmitted between them.
- With Windows Vista, the settings files originally supplied with ZoomBrowser EX cannot be deleted.










Basic Functions Contents Things to Mastering More Advanced Appendices

& Features Techniques

You can register the start-up image, start-up sound, shutter sound, operation sound and self-timer sound collectively if you select [Setup as a theme].

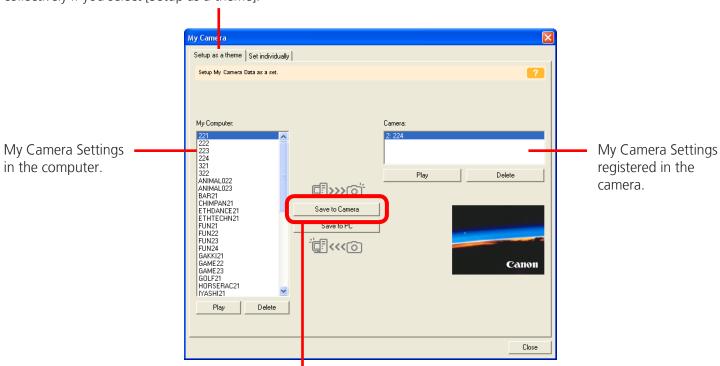

After selecting a My Camera Settings file from the left-hand list, select a My Camera Settings file to replace in the right-hand list and click this button to register it in the camera.








Basic Functions Things to Mastering More Advanced **Appendices** Contents & Features Remember the Basics **Techniques**

Transferring Images

Transferring Images to a Camera

Images transferred once to a computer can be transferred back to the camera.

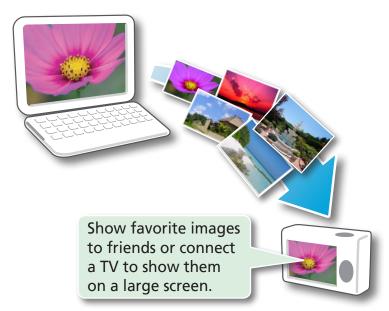

IMPORTANT


• Cameras that use the "MOV" data type can play back movies transferred back to the camera if movies were taken with that camera. Refer to the "Data Type" item in "Specifications" near the end of the Camera User Guide to see if the camera uses the "MOV" data type. You may not be able to play back movies taken with another camera. However, movies cannot be transferred to camera models that display the screen below. In this case, use a memory card reader to write movies and images to the memory card.



• Only still images compliant with Design rule for Camera File system standards can be transferred to your camera's memory card.



- Connect the camera to the computer.
- 2 Turn on the camera power, and set it to playback mode.
- **3** Select [Canon CameraWindow] (with Windows Vista, select [Downloads Images From **Canon Camera using Canon** CameraWindow].
- 4 Click [Operate Images on Cameral.

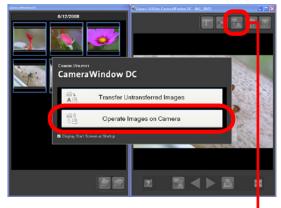

- 5 Click 🖳 (Send to Camera).
- If the Main Window is open when the camera is connected (directly after transferring for instance), open CameraWindow by clicking the [Acquire & Camera Settings] task button, followed by [Connect to Camera].








Preference Settings

Customizing ZoomBrowser EX

You can configure ZoomBrowser EX to operate according to your preferences.





- Overall themes, such as window appearances
- Processing methods for images shot with the camera on end
- Categories of shooting information displayed
- Show/hide messages
- Print settings
- Zoom speed

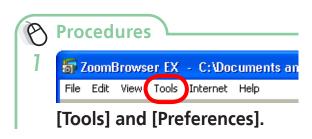

Customizing the Task Buttons

You can hide items that you do not usually use to streamline the task buttons.

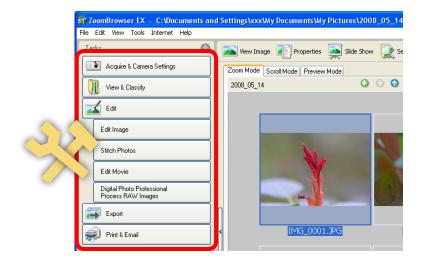

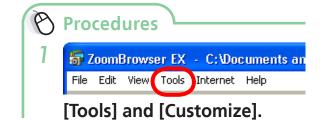







Supported Image Types

The following is a list of image types supported by ZoomBrowser EX.

JPEG (.JPG)

Most cameras use this image type. It compresses at very high ratios, taking advantage of the characteristics of the human eye. However, because it is an irreversible compression method (part of the data is lost during compression), if you process and save an image repeatedly using this method, the image may become rougher.

RAW (.CRW/.CR2)

This is a proprietary image type provided by Canon. It saves the output of the image pixels from a digital camera without any deterioration in the quality of the image. Some cameras might not support this image type.

Windows bitmap (.BMP)

This image type comes standard with Windows. Most Windows programs support it.

TIFF (.TIF)

This is a relatively popular image type. It is widely supported by non-Windows programs (such as Macintosh).

PhotoCD (.PCD)

This is the image type used for Photo CDs.

AVI (.AVI)

Standard Windows movie image type. The movie thumbnail and a movie icon show in ZoomBrowser EX's Browser Area.

MOV (.MOV)

Movie image type. The movie thumbnail and a movie icon show in ZoomBrowser EX's Browser Window.







Software User Guide Windows (ZoomBrowser EX, PhotoStitch)

Disclaimer

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Canon reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, memory cards, personal computers, peripheral devices, or use of non-Canon memory cards.

CDA-E021-020 © CANON INC. 2009

